

Remote & Wall Receiver

IF YOUR REMOTE IS NOT WORKABLE, PLEASE TRY THIS WAY TO CORRECT THE CODE BETWEEN REMOTE AND WALL RECEIVER

- ① Make sure the battery of remote is on working status
- ② Switch on the wall receiver with 220~240V power
- ③ Press the “Stop” button of wall receiver for 5~6 seconds, please stop pressing this button when you hear the 2nd “De” sound.
- ④ Press any button of remote control against wall receiver, you will hear a long sound “De” from wall receiver. It means the code of remote and wall receiver is the same now. You can use both remote or wall receiver to control projection screen again.

When you press the “ Stop” button of wall receiver for about 15 seconds, you will hear 3 times “ De” sounds, it means all records of wall receiver is deleted And then you can repeat above steps to set up new records again together with remote.